

MemoryMaker™ Template Installation Instructions
for the DPS Click or the DPS Click 5000 Systems

Available Templates:

<u>Template Name:</u>		<u>Description:</u>
M01 Small Horizontal	-	Small Horizontal
M02 Medium Square	-	Medium Square
M03 Lg Vert Rectangle	-	Large Vertical Rectangle
Template Square	-	Small Square
Template Rectangle	-	Rectangle

1. Download the files 'Composition_inch.ini' and 'Composition_Inch_enu.ini' to a removable media device (i.e. SmartMedia™, Compact Flash™, Memory Stick™, SD™/Multimedia Card™, CD-ROM or USB drive).
2. Go to 'Settings' from the Main screen of the DPS Click or DPS Click 5000.
3. Press Alt + F4 to close.
4. Go to the 'Start' menu.
5. Highlight and double click 'Programs'.
6. Click 'My Computer'.
7. Insert the removable media device (i.e. SmartMedia™, Compact Flash™, Memory Stick™, SD™/Multimedia Card™, CD-ROM or USB drive) where the 'Composition_inch.ini' and 'Composition_Inch_enu.ini' saved files are located.
8. Find the applicable drive, and double click.
9. Highlight the two files.
10. 'Edit / Copy'.
11. Go to the '(D:) drive' listed as DPS Click or Click Pro (note choose this selection for the DPS Click 5000 model) depending on which model you have.

Mitsubishi Digital Electronics America, Inc.
Imaging Products Division
9351 Jeronimo Road, Irvine, CA 92618-1904 • Ph: 888.307.0388

12. Select the 'DPS Click or Click Pro Folder'.
13. Select the 'Compositions' folder.
14. 'Edit / Paste'.
15. In the Confirm File Replace window click 'Yes to All'.
16. 'Close' all windows.
17. 'Restart' your system.
18. Start menu / Programs / DPS Click or Click Pro.
19. Go to the 'Photo Studio' Icon.
20. Insert removable media or use the Work folder to select an image.
21. Hit the 'Print Layout' button.
22. Click the 4 x 6.
23. Scroll down the listing to find the desired MemoryMaker™ template.

If additional assistance is needed, please contact Technical Support at
(888) 307-0309 or via email at tsupport@mdea.com.